



dPOFLEX[®] Peristaltic Pump Head BPH01


- Small size, compact structure
- Spring-loaded operation for longer tubing life and good pressure control
- Four-roller design for low pulsation
- Accept various tubing sizes (with 1.6mm wall thickness) for a wide flow rate range
- Easier system configuration with AC, DC, stepper, BLDC motors

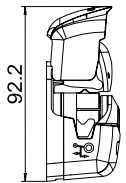

Flip-type for easier tubing loading

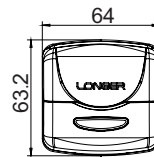

Can be integrated with AC, DC, stepper, BLDC motor for various control mode and easier system configuration

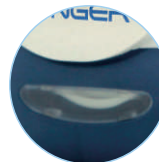

Running status can be easily monitored through the transparent PC window

Product Model	Product Code	Roller Number	Roller Material	Housing Material	Speed (rpm)	Tubing	Flow Rate Reference (mL/min)		Weight (kg)
							@400rpm	@600rpm	
dPOFLEX [®] BPH01	05.01.73A	4	PA6+MOS2	IXEF	Continuous flow ≤400rpm	13#	14	21	0.1
						14#	57	85	
						19#	117	175	
						16#	190	285	
						25#	353	530	
					Intermittent flow ≤600rpm				

